

# Simple things change the world

Open offices enable free-flowing ideas between employees. However, noise is a common problem. Almost 50 percent of employees in open offices say the lack of sound privacy is the most frustrating aspect in their workplace. Installing sound insulated high-quality privacy spaces in offices significantly increases satisfaction and efficiency in the workplace.



**FRAMERY O**  
is typically used for  
phone calls and concentration.




**FRAMERY Q**  
enables private  
meetings for 1-4 users.

Users should be able to walk to the booth in a few seconds when their phone rings, or to have a spontaneous discussion with a colleague.

\* Place this in the middle instead.

When privacy spaces are close to people, they are likely to be used intensively.

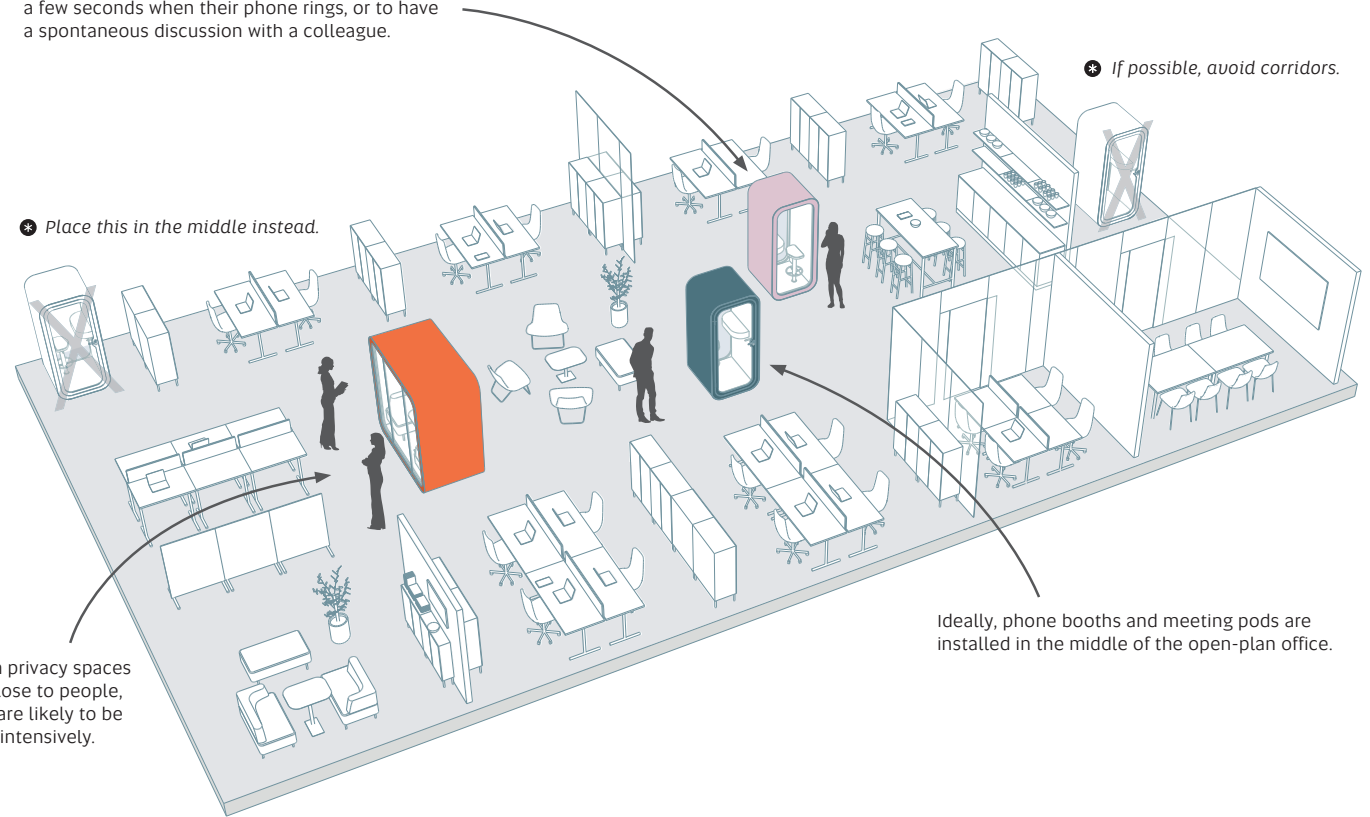

\* If possible, avoid corridors.

Ideally, phone booths and meeting pods are installed in the middle of the open-plan office.

\* If possible, do not place phone booths in corridors or lobbies. This makes them difficult to reach and may result in low utilization.